


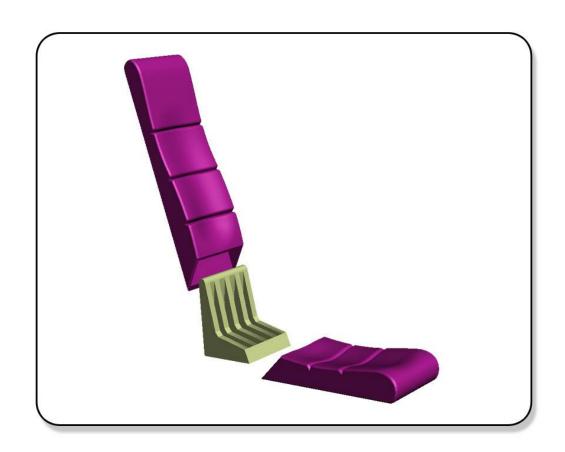

Bell 206 Jet Ranger Helicopter front pilot/copilot seats

















TIPS

- To help remove excess 3D print material try using pliers, knife, rasp or metal file. Take care as plastic maybe sharp.
- When cutting or sanding, use a low speed to avoid melting the plastic
- Plastic suitable glue recommended. Test on inconspicuous area first
- Chairs maybe painted or for best results upholstered using thin, stretchable, velour cloth.
- Spray-on contact cement is useful for upholstering. Coat plastic part with cement, then apply cloth
- Upholster individual parts first, then assemble chair

